


EL-477
מגהץ אדים קרמי STEAM IRON

הוראות שימוש



חלקי המכשיר

1. בורר טמפרטורה
2. כפתור התזה
3. כפתור לחץ אדים
4. פיית התזה
5. פתח מילוי מים
6. נורית בקרה
7. ווסת בורר עוצמת אדים, ימין-סגור, אמצע אדים, שמאל ניקוי עצמי.
8. משטח גיהוץ בציפוי קרמי
9. גוף המגהץ
10. מיכל מים
11. גב המגהץ
12. בסיס הכבל
13. ידית אחיזה

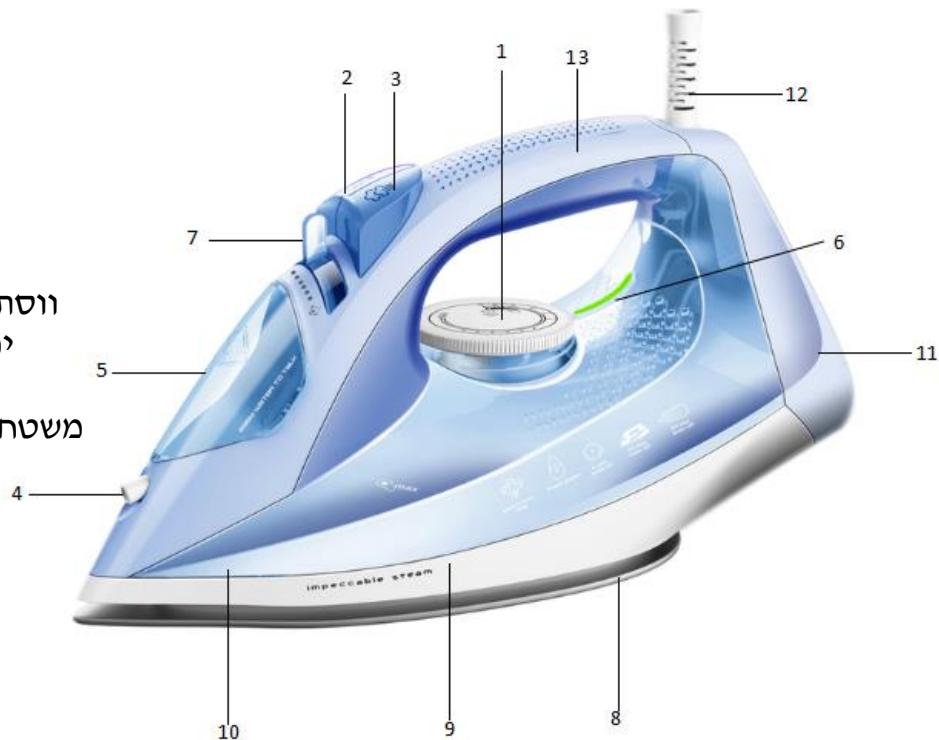

1. אין לגעת במשטח החם.
2. אין לגהץ בגדים על גוף.
3. יש להרחיק את המכשיר ממגע ידם של ילדים.
4. יש להרחיק את כבל ההפעלה מעצמים חמים.
5. מכשיר זה נועד לשימוש ביתי בלבד.
6. הצבת המכשיר במקום יבש ויציב.
7. אין להשתמש בחלקים לא מקוריים.
8. אין להשאיר את המגהץ ללא השגחה כשהוא מחובר לחשמל.
9. אם פתיל הזינה ניזוק כדי למנוע סיכון יש להחליפו רק במעבדת שירות המאושרת ע"י היצרן.

10. בכל מקרה תקלה יש לתקן המכשיר אך ורק במעבדות השירות המוסמכות לכך.

הוראות שימוש :

1. מילוי מים – ניתן למלא מים במיכל ההתזה ע"י משיכה של מיכל המים כלפי מעלה ורק כאשר המגהץ מנותק מחשמל.
2. כוון את ווסת הטמפרטורה לפי סוג הבד :
בד סינתטי - חום נמוך בד משי/צמר - חום בינוני בד כותנה/פישתן - חום גבוה
3. יש לחבר את תקע המגהץ לשקע החשמלי, נורת ביקורת תדלק דבר המסמן כי המגהץ מתחמם.
4. כאשר הנורית נכבית סימן שהמגהץ הגיע לטמפ' הרצויה, בזמן השימוש נורת הבקרה האוטומטית נכבית ונדלקת כסימן לכך כי התרמוסטט שומר על הטמפרטורה שנבחרה.
5. להתזה – ניתן להתזיז כאשר יש מים במיכל, יש ללחוץ על כפתור ההתזה על הבגד הרצוי. לחיצה חלשה התזה חלשה, לחיצה חזקה התזה חזקה.
6. מילוי מים מחדש- יש לנתק את הזרם, להמתין עד להתקררות המגהץ ואז למלא מחדש.
7. לאחר הגיהוץ יש לנתק את המכשיר מהחשמל, לרוקן את המים, להעביר את בורר הטמפ' למצב מינימום, יש לאחסן במצב אנכי.
7. ניקוי חיצוני יעשה אך ורק ע"י מטלית לחה ואח"כ יבשה, ללא כל חומר לניקוי.

אזהרות חשובות :

- מכשיר זה אינו מיועד לשימוש ע"י אנשים כולל ילדים, עם יכולות פיזיות, חושיות או שכליות מופחתות, או עם העדר ניסיון וידע. אלא אם הם תחת פיקוח או שקיבלו הנחיות לשימוש במכשיר על ידי אדם האחראי לבטיחותם.
 - כבה את המכשיר ונתק אותו מאספקת החשמל וספק הכוח לפני החלפת אביזרים או גישה לחלקים הנעים במכשיר.
 - יש לנתק את המכשיר מזרם החשמל כשאינו בשימוש או אינו תחת השגחה.
 - המכשיר מיועד לשימוש ביתי בלבד.
 - ילדים צריכים להיות תחת השגחה, כדי להבטיח שהם לא משחקים עם המכשיר.
- יש להיזהר לגבי פציעה פוטנציאלית עקב שימוש לא נאות. ההוראות כי יש לנקוט זהירות בעת ריקון הקערה ובמהלך והניקוי.
- יש להיזהר במקרה של שפיכת נוזל חם לקערת המכשיר, מכיוון שהוא עלול להיפלט מהמכשיר עקב פעולת המכשיר.
- הקפד תמיד לנתק את הממחה מאספקת החשמל כאשר הוא נשאר ללא השגחה וגם לפני ההרכבה, פירוק או ניקוי אל תאפשר לילדים להשתמש במכשיר ללא פיקוח.

IMPORTANT SAFEGUARDS

1. Please read all instructions carefully before using the appliance for the first time.
2. Before connecting the appliance, check if the voltage indicated on the rating plate corresponds with the mains voltage in your home.
3. Do not use appliance for anything other than intended use.
4. The iron should always be switched off before connecting or disconnecting from the power supply. Do not pull on the cord to disconnect the plug from the wall socket.
5. If the power cord is damaged or defective, it must be replaced by an authorised service center to avoid a hazard.
6. When you have finished ironing or when you are leaving iron unattended:

-turn the variable steam control(7) to position "X", and the temperature control dial(1) to "min"

-stand the iron upright,
-disconnect the iron from the wall outlet.

7. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.
8. Do not immerse the iron or the cord into water or any other liquid.
9. Do not touch hot metal parts, hot water or steam. These parts become hot and may cause burns. Take care if you turn the iron upside down: there may be hot water in the tank.
10. The plug and cord should not be allowed to touch the hot sole plate. Let the iron cool down completely before taking it away. Roll the power cord around the iron for storage.
11. Disconnect the iron from the wall outlet while filling with water or when emptying the water after use.
12. To avoid an overloaded circuit, do not operate another high voltage appliance in the same electric circuit.
13. Never use an extension power cord set that is not approved by a competent authority.
The cord should be rated for 10A (Europe) or 15A (America), cords rated for less amperage may overheat. The cord should be arranged in a way that it cannot be pulled or tripped over.
14. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
15. The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
16. The iron must be used and rested on a stable surface.
17. The iron is for household use only.

SAVE THE INSTRUCTION MANUAL FOR FUTURE REFERENCE

Notes:

- Some parts of the iron have been slightly greased and as a result, the iron may smoke slightly when switched on for the first time. It will not happen again after a few uses.
- Before using for the first time remove any protective films or stickers from the sole plate and the cabinet. Clean the sole plate with a soft cloth.
- When using the iron for the first time, test it on an old piece of fabric to ensure that the sole plate and water tank are completely clean.

IRONING

Important: Have you read the section "Important Safeguards"?

CHOICE OF WATER

- This iron can be used with normal tap water.
- If the water in your area is particularly hard, it is advisable to use distilled or demineralized water.
- Do not use chemically descaled water or any other liquids for refilling.

HOW TO FILL IN WATER

- Set the variable steam control(7) to "X" and the temperature control dial(1) to "min".
- Unplug the iron from the wall outlet, and wait for the iron to cool down.
- Pour water into the water inlet (5):
 - Fill up to the maximum level "MAX" of the water tank.

TEMPERATURE CONTROL SETTING

- Always check garment label for ironing instructions before ironing garment.
- If the ironing instructions are missing, then the table below may help you.
- First you should sort the laundry: Wool with wool, Cotton with cotton etc. Start ironing the fabrics requiring the lowest temperature and progress to the higher ones because the iron heats up quicker than it cools down.
- If the fabric consist of various kinds of fibres (e.g. cotton with polyester) you must always select the ironing temperature for the material with the lowest advised temperature.

IRONING LABEL	KIND OF TEXTILE	FABRICS
	Synthetic	Acrylic Polypropylene Polyurethane
	Synthetic	Acetate Triacetate
	Synthetic	Polyamide (Nylon) Polyester Viscose(Rayon)
	Silk	Silk
	Wool	Wool
	Cotton	Cotton
	Linen	Linen

SETTING THE TEMPERATURE

- Insert the plug in the wall socket and stand the iron upright.
- Turn the temperature control dial (1) to the desired temperature setting.
- The desired temperature has been reached when the pilot light has turned off. The pilot light will turn on and off from time to time, indicating that the selected temperature is being maintained.

SPRAYING

This function can be used any time and it does not affect the ironing temperature.

- Fill water into the iron as described on page 3.
- Aim the nozzle towards the garment.
- Press the spray button (3).

STEAM IRONING

This function can be used only at higher ironing temperature.

- | | |
|--------------|--------------------|
| ● ● | for moderate steam |
| ● ● ● or MAX | for maximum steam |

- Fill water into the iron as described on page 3.
- Stand the iron upright.
- Connect the iron to a suitable mains supply outlet
- Turn the temperature control dial(1) to the “● ●”, “● ● ●” or MAX setting
- The pilot light turns off when the required temperature is reached. The iron is ready for use.
- Turn the steam control knob(7) to the required position, steam starts coming out from the holes in the sole plate.

Notice: With conventional steam ironing, water may leak from the sole plate if too low a temperature has been selected. If this happens, turn the temperature control dial(1) to the advised position. Steam will recommence as soon as the appropriate temperature has been reached.

BURST OF STEAM

This function provides an extra amount of steam to remove stubborn wrinkles.

- Fill the iron with water as described on page 3.
 - Turn the temperature control to the position “MAX”
 - The pilot light turns off when the required temperature is reached
 - The iron is ready for use
 - Press the Burst of Steam button (2) once
 - Steam will penetrate into the garment removing the wrinkles
 - Wait a few seconds before pressing the steam control knob again when there are stubborn wrinkles
- Usually all wrinkles can be removed within three pressings

DRY IRONING

- Connect the iron to a suitable mains supply outlet.

- Ensure that the steam control knob(7) is in position "0"
- Select the setting on the temperature control dial(1).
- When the pilot light turns off, the required temperature is reached. The iron is ready for use.

SELF-CLEAN FUNCTION

You can use the self-clean function to remove scale and impurities.

Use the self-clean function once every two weeks. If the water in your area is very hard, the self-clean function should be used more frequently.

- Make sure the appliance is unplugged.
 - Set the steam control knob to position "O"
 - Fill the water tank to maximum level.
 - Select the maximum ironing temperature.
 - Put the plug in the wall socket.
 - Unplug the iron when the amber temperature pilot light has gone out.
 - Hold the iron over the sink, press and hold the self-clean button and gently shake the iron and fro.
(Steam and boiling water will come out of the soleplate. Impurities and flakes (if any) will be flushed out.)
 - Release the self-clean button as soon as all water in the tank has been used up.
- Repeat the self-clean process if the iron still contains a lot of impurities.

CARE AND CLEANING

1. Turn the temperature control dial(1) to "OFF", then disconnect the iron from the wall outlet and let it cool down completely.
2. Deposits and other residues on the sole plate can be removed with a cloth soaked in a vinegar/water solution.
3. The casing may be wiped with a damp cloth and then polished with a dry one.
4. Never use any abrasives to clean the sole plate.
5. Keep the sole plate smooth; avoid contact with metal objects.

STORAGE

- Turn the temperature control dial(1) to "OFF" and set the steam control knob (7) to position "0" (=no steam).
- Disconnect the iron from the wall outlet.
- Pour any remaining water out of the water tank.
- Stand the iron upright and let it cool down completely.
- The power cord can then be wound around the iron.
- Always store the iron in an upright position.

SAFETY PROTECTIVE CUT-OUT

In the unlikely event of the thermostat failing, the protection cut-out will operate to prevent the iron overheating. Then the iron should be taken to the nearest authorized service facility.

